

MesMed



DESKTOP FAN

MM 730 VENTUM

MANUAL USER

Thank you for purchasing our product. We wish you a pleasant use.

Before using the device for the first time, please read the instruction manual.

1.Important, read before you turn on the device


1. Incorrect operation and improper handling can lead to faults with appliance and injury to user.
2. In the event of improper use or handling. No liability can be accepted for any damage which may occur.
3. Before connecting to mains ensure the supply voltage complies with products rating plate.
4. To protect against risk of electric shock, do not immerse or expose to water or other liquids.
5. In the event of the mains cable being damaged it must be replaced by a qualified electrician or trained personnel.
6. Do not remove the mains plug from the socket by pulling the mains cable or with wet hands.
7. Ensure the mains cable does not hang over sharp edges or can be trapped.
8. Keep the appliance dry. Do not allow to get damp.
9. Keep the appliance away from sources of heat and open flames.
10. This appliance should not be operated by children.
11. Children should be supervised at all times and monitored to ensure they do not play with the appliance.
12. This appliance should not be operated by means of an external timer switch or similar. This may cause damage to the appliance.
13. Use the appliance on a flat, dry surface.
14. This appliance is intended for Domestic use only.
15. Never insert fingers, pens, pencils or any other object into grille while fan is running.
16. Never operate the product without the fan guards in place, as serious injury may result. Isolate from mains supply before removing fan guard for any reason.
17. Ensure the appliance is fully assembled before use.

2. Features

- 3 speed
- 80 degree oscillation
- vertical adjustment of the slope

3. Parts descriptions

1. Front fan guard
2. Fan blade
3. Base
4. Speed Buttons

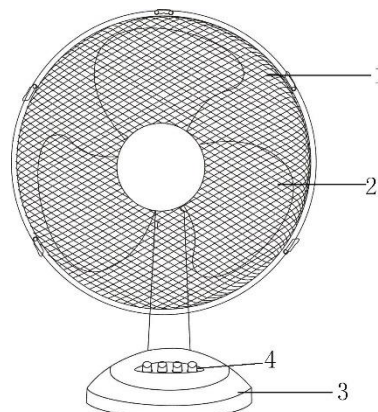

1. Unscrew the grille retaining ring from motor shaft.
2. Put the rear fan guard on the motor shaft and screw together with the grill retaining ring.
3. Connect fan blade to motor shaft.
4. Attach front fan guard and close the clips using appropriate screw to secure grille together.

a) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

b) Children should be supervised to ensure that they do not play with the appliance.

c) If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarity qualified person in order to avoid a hazard.

4. Technical Data

Supply Voltage 220-240 V

Frequency 50Hz

Power consumption 33W

Electrical protective class of the device II

Weight 1,7 kg

Height 48,5 cm

Width 34 cm

5. Operating Instructions

1. Plug the power cord into suitable socket.
2. Oscillation: To make the fan oscillate, push down the oscillation knob. To stop the fan head from oscillating, pull up the oscillation knob.
3. The fan is switch on using the push buttons on the base. 0 = Off, 1 = Low Speed, 2 = Medium Speed 3 = High Speed

CAUTION: Press only one speed control button at a time. Permanent damage to the Switch housing may result if two or more of the buttons are pressed simultaneously.

1. Before servicing the fan and after use, switch off the appliance and unplug from mains.
2. Never immerse the appliance in water. To clean the appliance, wipe down with a damp cloth and then dry carefully. Always isolate from mains power before cleaning.

6. Trouble shooting

The device does not start

- Not connected power cord - connect the power cord
- The switch is damaged - return the device to service

The device is running loudly or generating high vibrations

- Damaged cover - replace the cover
- Damaged engine – put the device into service

